

## Owner's Manual Addendum for DVD Player-Equipped Systems

Congratulations on purchasing a Rosen system equipped with a DVD Player. This DVD Player comes with its own remote control, which replaces the Video Cassette Player remote control described in the Owner's Manual. This addendum explains these differences in order to help you use your DVD player.

### Using the DVD Player

To insert a DVD disc into the DVD Player, first press the blue eject button to make sure the slot is empty. Then gently insert a DVD disc into the empty slot.

### Using the System Remote

There are two sets of buttons on the system remote: the *white* buttons and the *gray* buttons. The gray buttons function as described in the Owner's Manual. Note that the gray "LCD Power" button now reads "System Power".

DVD Player



Eject button



System Remote

(replaces the remote pictured in the Owner's Manual)

## Using the System Remote (continued)

It's important to note that the white "MENU/ENTER" button serves a different function than the gray "MENU" button.

- The gray "MENU" button accesses the system's menu as described in the Owner's Manual Chapter 2, "Remote Control and On-Screen Menus".
- The white "MENU/ENTER" button accesses DVD menu functions, which are standard functions on all DVD players.
- Once the DVD menu is accessed with the MENU/ENTER button, use the navigation keys to select the desired feature, and then use the MENU/ENTER button again to enter that selection.

The rest of the white buttons (Play, Pause, Fast Forward, Rewind, Eject, and Stop) operate as described in the Owner's Manual.

