

GETTING STARTED

Selecting a Video Source

From your navigation system, select Rear Source from the Menu page.



Choose from one of the available options.


Note: Options will vary depending on the unit installed.



Your selection will automatically display on the Rear Monitor System.



CONTROLLING THE SOURCE

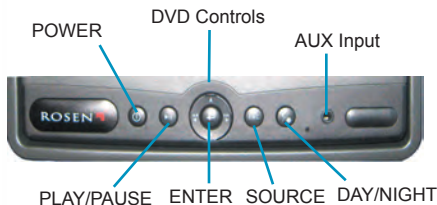

Button Functions

POWER: Turn system On/Off

PLAY/PAUSE: Play or pause DVD

DVD Controls: Select various DVD functions such as previous/next chapter, scene selection, etc.

- **Chapter Prev/Next** -Long press for DVD
- **Up Arrow** -Long press for root menu

ENTER: Confirms selection in DVD mode or hold for several seconds to enter display menu

SOURCE: Select between Main and AUX screen

DAY/NIGHT MODE: Select for screen dimmer

SYSTEM SETTINGS

Setting The Headphone Channels

Enter setup mode by pressing the PLAY/PAUSE and SOURCE button simultaneously for several seconds. Use the left and right arrows to switch between Ch. A/B/OFF.

Adjusting The Display

Press ENTER for the settings menu. You can adjust the brightness, color, tint, contrast and screen mode (Normal/Wide). RESET will change settings back to default.

