





## TURN ON THE SYSTEM

- Turn vehicle ignition to **ON** or **ACC**
- Press **POWER**  on the remote (FIG 2) or **OPEN**  on the front control panel (FIG 1).

*NOTE: The operating temperature range of the system is from 32° to 140° F.*

### FRONT CONTROL PANEL

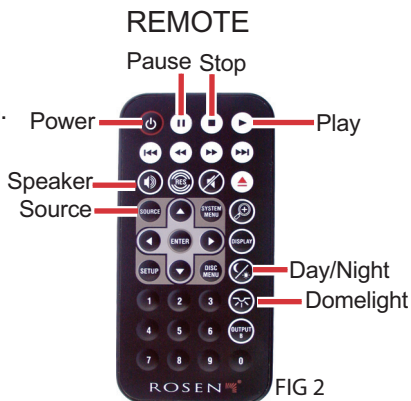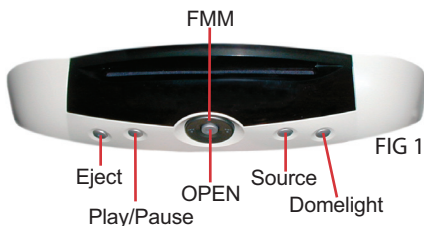

## PLAY A DVD OR CD

- Press and release the **SOURCE** button on the remote (FIG 2) or the front control panel (FIG 1) until "INTERNAL DVD" appears.
- Insert a disc, label side up, into the disc slot (FIG 3). Most DVD's and CD's will load or play immediately. If a DVD or CD menu appears on the screen, press **PLAY** (FIG 2) on the remote or overhead control panel.



## USE THE HEADPHONES

- Turn on by pressing the **ON/OFF** button, located on the ear piece. The power LED on the ear piece should illuminate - if not, check that the batteries are inserted properly.
- Turn down the volume knob on the ear piece. Put over ears and re-adjust volume.



*Note: The headphones must have a clear line of sight to the T10/T12 screen to operate properly.*

